
ACCUVALVE® MODEL AVC6000 SUBMITTAL

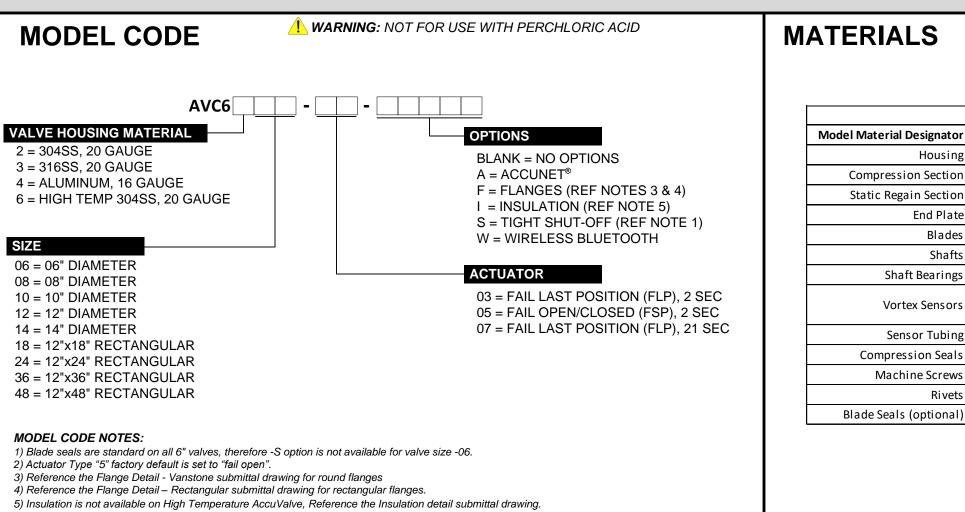

OPERATING RANGE

	Min.	Flow Mea	sured	Full Scale Range			
Valve Model	CFM	L/S	СМН	CFM	L/S	СМН	
AVC6X06-XX	30	14	51	315	149	535	
AVC6X08-XX	80	38	136	800	378	1359	
AVC6X10-XX	120	57	204	1300	613	2209	
AVC6X12-XX	180	85	306	1790	845	3041	
AVC6X14-XX	250	118	425	2750	1298	4672	
AVC6X18-XX	260	123	442	3200	1510	5437	
AVC6X24-XX	350	165	595	4000	1888	6796	
AVC6X36-XX	520	245	883	6400	3020	10874	
AVC6X48-XX	700	330	1189	8000	3775	13592	

SIZE AND WEIGHT

	Valve Dimensions (Reference Sheet 2)					Weight						
Valve Model	"D" or "W"		"L"		"H"		Stainless Steel		Aluminum		Flange Add	
	in.	mm	in.	mm	in.	mm	Lbs.	kg	Lbs.	kg	Lbs.	kg
AVC6X06-XX	5.88	149	22	559	10	254	13	5.9	9	4.1	2.0	0.9
AVC6X08-XX	7.88	200	24	610	13	330	16	7.3	12	5.4	2.6	1.2
AVC6X10-XX	9.88	250	24	610	15	381	20	9.1	14	6.4	3.2	1.5
AVC6X12-XX	11.88	300	27	686	17	432	26	11.8	16	7.3	4.5	2.0
AVC6X14-XX	13.88	350	30	762	19	483	30	13.6	20	9.1	5.2	2.4
AVC6X18-XX	17.88	454	30	762	19	483	43	19.5	26	11.8	5.0	2.3
AVC6X24-XX	23.88	607	30	762	19	483	49	22.2	29	13.2	5.5	2.5
AVC6X36-XX	35.88	911	30	762	19	483	97	44	59	26.8	10.0	4.5
AVC6X48-XX	47.88	1216	30	762	19	483	109	49.2	69	31.3	11.0	5.0

Accutrol Representative: CCUTROL

≥IIC

21 Commerce Dr

Danbury, CT 06810

Tel: 203-445-9991

accutrolllc.com

SUBMITTAL DRAWING

AccuValve[®] Model AVC6000

THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE. THIS DOCUMENT OR THE CONTENTS THEREOF SHALL NOT BE MODIFIED WITHOUT PRIOR WRITTEN PERMISSION BY ACCUTROL LLC.

(2) 304SS

304 Stainless Steel

316 Stainless Steel

Teflon

Polycarbonate Plastic,

UL94-V0

Polyurethane, Ether-based

Viton Rubber

304 Stainless Steel

304SS

Viton Rubber

Housing

End Plate

Shaft Bearings

Vortex Sensors

Sensor Tubing

Compression Seals

Machine Screws


Blades

Shafts

Rivets

Materials Exposed to the Airstream							
4SS (3) 316SS		(4) Aluminum	(6) High Temp 304SS				
ss Steel	316 Stainless Steel	Al. Alloy 5052-H32	304 Stainless Steel				
ss Steel	316 Stainless Steel	Al. Alloy 5052-H32	304 Stainless Steel				
ss Steel	316 Stainless Steel	Al. Alloy 5052-H32	304 Stainless Steel				
ss Steel	316 Stainless Steel	Galvanized Steel	304 Stainless Steel				
ss Steel	316 Stainless Steel	Galvanized Steel	304 Stainless Steel				
ss Steel	316 Stainless Steel	316 Stainless Steel	316 Stainless Steel				
n	Teflon	Teflon	Teflon				
e Plastic, VO	Polycarbonate Plastic, UL94-V0	Polycarbonate Plastic, UL94-VO	303 Stainless Steel				
ther-based	Polyurethane, Ether-based	Polyurethane, Ether-based	Viton Rubber				
bber	Viton Rubber	EPDM Rubber	Viton Rubber				
ss Steel	316 Stainless Steel	304 Stainless Steel	304 Stainless Steel				
S	316SS	304SS	304 SS				
bber	Viton Rubber	EPDM Rubber	Viton Rubber				

DWG. NO:	AVC6000 SUBMITTAL DWG				
REVISION :	J	ECN:	2635		
REV. DATE:	6-10-20	SHEET:	1	OF:	5

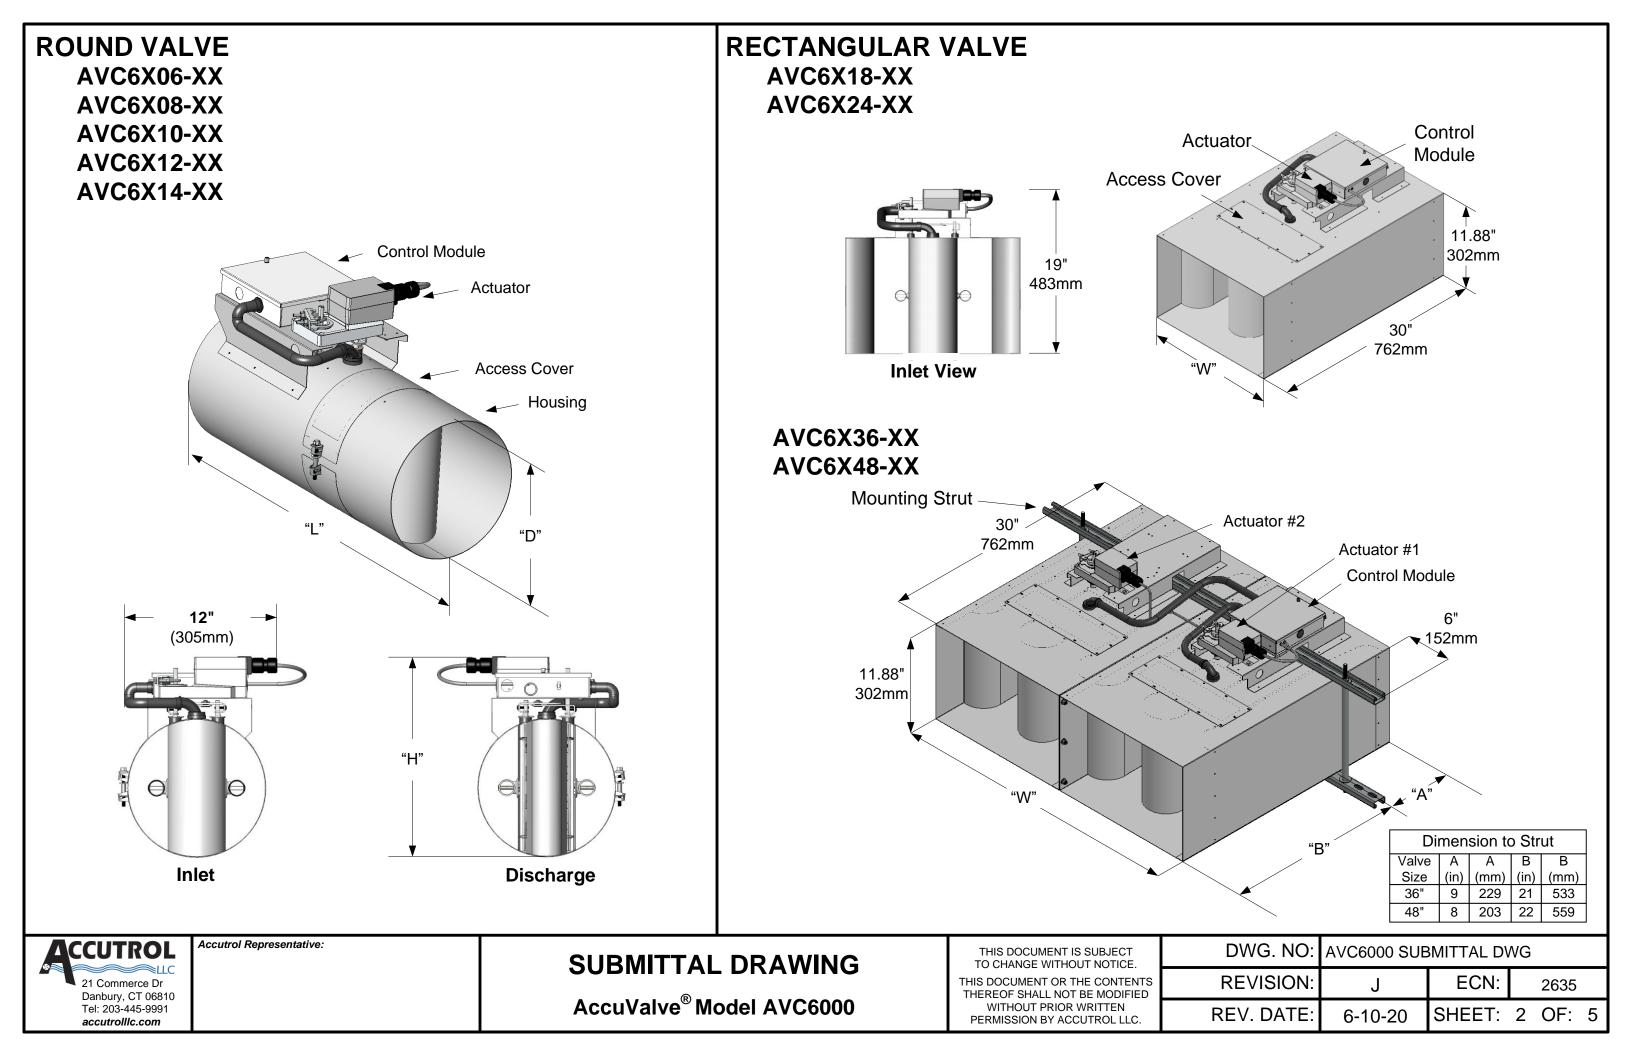

ROUND VALVE: INSTALLATION INSTRUCTIONS

1. Read all instructions prior to beginning installation.

NOTE: For detailed installation instructions, refer to the AccuValve[®] Installation & Operation Manual.

- 2. Verify the tag number located on the valve label matches the HVAC schedule.
- 3. Locate the duct section which the valve is servicing and select a suitable mounting location for the valve.

NOTES: The AccuValve[®] does not require straight inlet duct runs to operate properly, however it's always best to locate the valve away from transitions and bends to minimize impact on system static pressure. Be sure to select a location that will provide a minimum clearance of 14 inches (356 mm) unobstructed access to the control module, actuator and valve access cover. The AccuValve[®] is not position sensitive. It can be installed in any plane or rotational axis without having impact on the performance.

4. Provide an opening in the selected duct section sized appropriately for the valve being installed.

NOTE: A slip-fit valve will require an opening approximately 2" (50.8 mm) smaller than the valve length, whereas a flanged valve will require an opening the same length as the valve. Reference Sheet 1 for valve dimensions.


5. Install duct hangers within 12 inches (305 mm) from each end of the valve. Reference Sheet 1 for valve weights.

NARNING: Use duct hangers and hardware designed to support the total load of valve and associated duct sections. Failure to do so may result in serious personal injury or death.


6. Install the value into the duct in accordance with the Airflow Direction Label located on the value. Position the value for easy access to the controller side then secure to duct per the appropriate Figure below.

NOTE: Screws, nuts, fasteners, duct sealant, hangers, and gaskets are not provided by Accutrol LLC.

Standard Slip-fit Valve Secured Using Tek Screws Standard Slip-fit Valve Secured Using Draw Bands (Draw Bands are Sold Separately) Seal joints using duct sealant and secure valve After sealing joints with appropriate type of tape, secure to duct at both ends using Tek screws. both ends using draw band clamps. using appropriate hardware. Figure 1 Figure 2 14" (356mm) 14" (356mm) 14" (356mm) Keep-Out Zone Keep-Out Zone Keep-Out Zone Reference Accutrol Draw Band Clamp Submittal Drawing for Details Accutrol Representative: CUTRO THIS DOCUMENT IS SUBJECT SUBMITTAL DRAWING TO CHANGE WITHOUT NOTICE. THIS DOCUMENT OR THE CONTENTS Commerce Dr Danbury, CT 06810 THEREOF SHALL NOT BE MODIFIED AccuValve[®] Model AVC6000 WITHOUT PRIOR WRITTEN Tel: 203-445-9991 PERMISSION BY ACCUTROL LLC accutrolllc.com

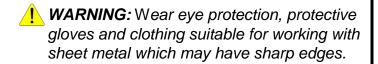

Flanged Valve "Option F" Secured Using Companion Flanges (Companion Flanges are Sold Separately) Install companion flanges to duct ends and secure to duct. Apply duct sealant and/or gasket to flange face. Install valve and rotate Vanstone flanges to align with bolt holes on the duct flanges. Secure flanges using appropriate hardware.

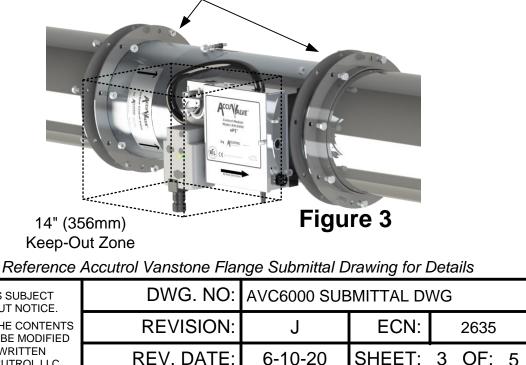

RECTANGULAR VALVE: INSTALLATION INSTRUCTIONS

1. Read all instructions completely before installing the valve.

WARNING: Wear eye protection, protective gloves and clothing suitable for working with sheet metal which may have sharp edges.

- Verify the tag number located on the valve label matches the HVAC schedule.
- 3. Select optimum mounting location for the valve.

NOTE: The AccuValve[®] does not require straight inlet duct runs to operate properly, however it's always best to locate any duct device away from transitions and bends to minimize impact on system static pressure.

4. Allow a minimum clearance of 14 inches (356 mm) unobstructed access to the controller, actuator and valve access cover.

NOTE: Rectangular valves are normally installed with the "access side" facing downwards for easy access. However, the AccuValve[®] is not position sensitive. It can be installed in any plane or rotational axis without having impact on the performance.

5. To support the weight of the valve, install duct hangers within 12 inches (305 mm) of valve connections. The 12"x36" and 12"x48" valves include an integral mounting strut which shall be used to support the valve in addition to the duct hangers. Reference Sheet 1 for valve weights.

WARNING: Use duct hangers and hardware designed to support the total load of the valve and associated duct sections. Failure to do so may result in serious personal injury or death.

6. After the duct section is properly supported to carry the weight of the valve, install valve into the duct in accordance with the Airflow Direction Label located on the valve. Position valve so the controller, actuator and access cover are easily accessible. For 12x36" and 12x48" valves, attach the integral mounting bracket to threaded rod or duct hangers capable of supporting valve weight.


7. Reference the appropriate diagram to the right for installation details. NOTE: Screws, nuts, fasteners, duct sealant, hangers, companion flanges and gaskets are not provided by Accutrol LLC.

Accutrol Representative:

Danbury, CT 06810

Tel: 203-445-9991


accutrollic.com

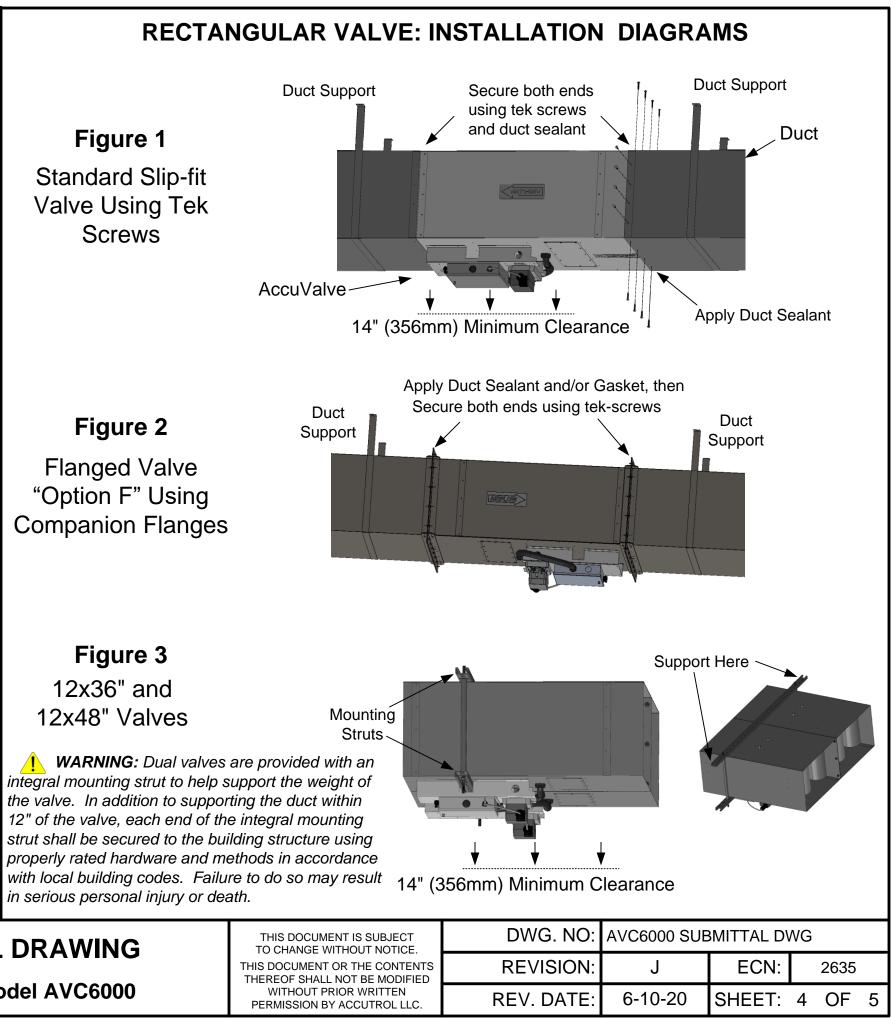

SUBMITTAL DRAWING

AccuValve[®] Model AVC6000



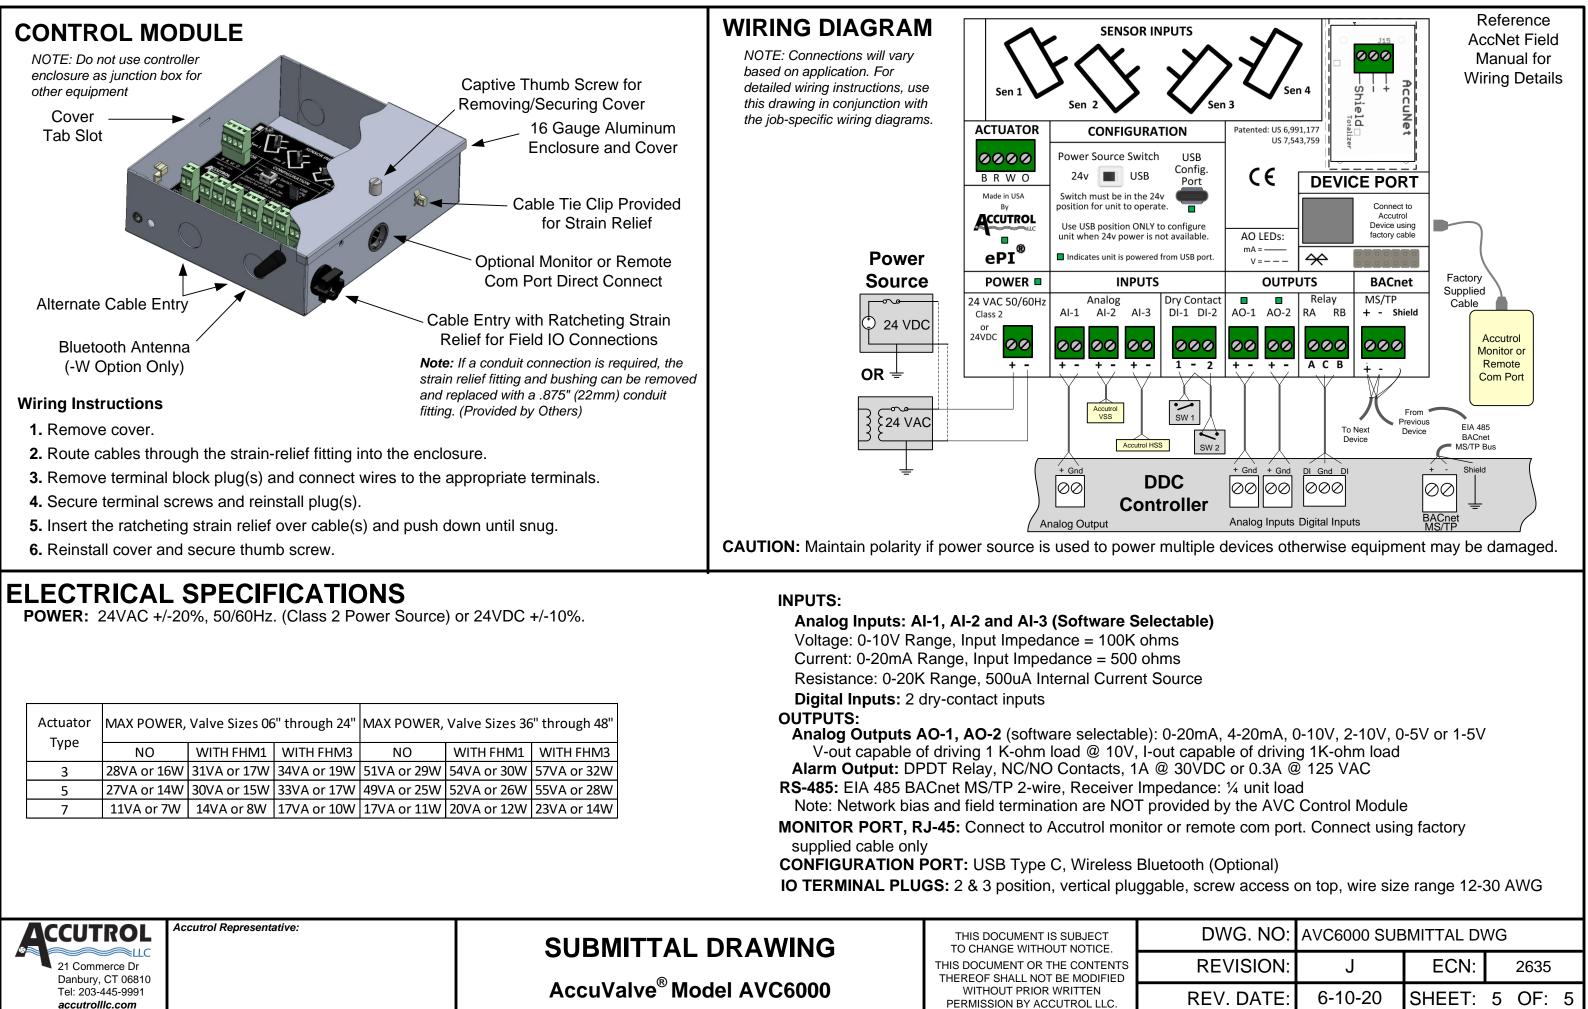

	MAX POWER,	Valve Sizes 06	5" through 24"	MAX POWER, Valve Sizes 36" through 48"			
Туре	NO	WITH FHM1	WITH FHM3	NO	WITH FHM1	WITH FHM3	
3	28VA or 16W	31VA or 17W	34VA or 19W	51VA or 29W	54VA or 30W	57VA or 32W	
5	27VA or 14W	30VA or 15W	33VA or 17W	49VA or 25W	52VA or 26W	55VA or 28W	
7	11VA or 7W	14VA or 8W	17VA or 10W	17VA or 11W	20VA or 12W	23VA or 14W	

THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE.
THIS DOCUMENT OR THE CONTENTS
THEREOF SHALL NOT BE MODIFIED
WITHOUT PRIOR WRITTEN PERMISSION BY ACCUTROL LLC.
PERIVISSION BY ACCUTRUL LLC.