

# AVC-RP SUBMITTAL

The AVC-RP is used in conjunction with the AccuValve® Model AVC to provide a local USB communication port which connects directly to the AVC. The AVC-RP is offered with standard cable lengths up to 100' to ensure the AVC-RP can be mounted in a convenient location that is easily accessible. If a longer cable is required, please contact factory. The AVC-RP is provided with 2 mounting screws for securing to a standard single-gang electrical box.

## AVC-RP-

|                            |       |
|----------------------------|-------|
| 25' Plenum Rated Cable...  | 0 2 5 |
| 50' Plenum Rated Cable...  | 0 5 0 |
| 75' Plenum Rated Cable...  | 0 7 5 |
| 100' Plenum Rated Cable... | 1 0 0 |

## SPECIFICATIONS

### Electrical

All Connections are Provided by the Prefabricated Factory Cable Connected to the AVC

### Temperature Range

Operating: -4°F to +158°F (-20°C to +70°C)

Storage: -22°F to 176°F (-30°C to +80°C)

### Physical Construction

Metal Plate with Continuous Vinyl Overlay which Provides Protection from Splashes

Mounting: Installs Directly into a Standard Single-gang Electrical Box


### Configuration Port

USB Type Mini Protected by Removable Rubber Plug

Connect to PC with the AVC Insight Software


All Configuration Settings for the AVC are Programmed through the AccuValve Insight Software

## INSTALLATION

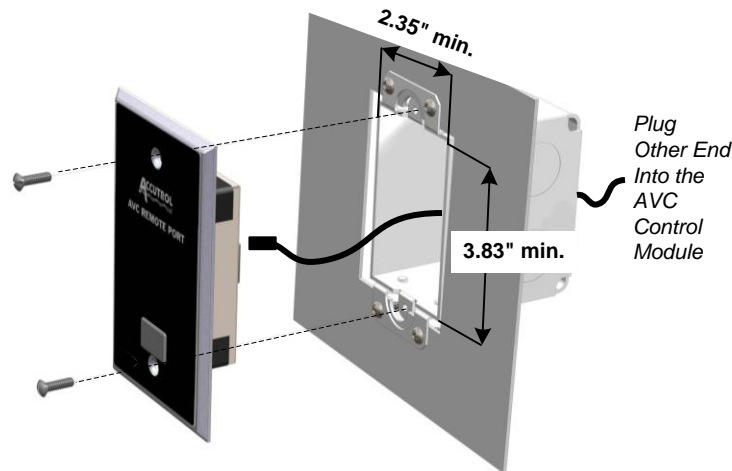

1. Feed the Display Cable into the back of the electrical box.
2. Plug the Display Cable into the RJ-45 Connector located on the back of the AVC-RP.
3. Plug the other end of the Cable into the AccuValve AVC Control Module.
4. Secure the AVC-RP to the electrical box using the two screws provided.

## DIMENSIONS

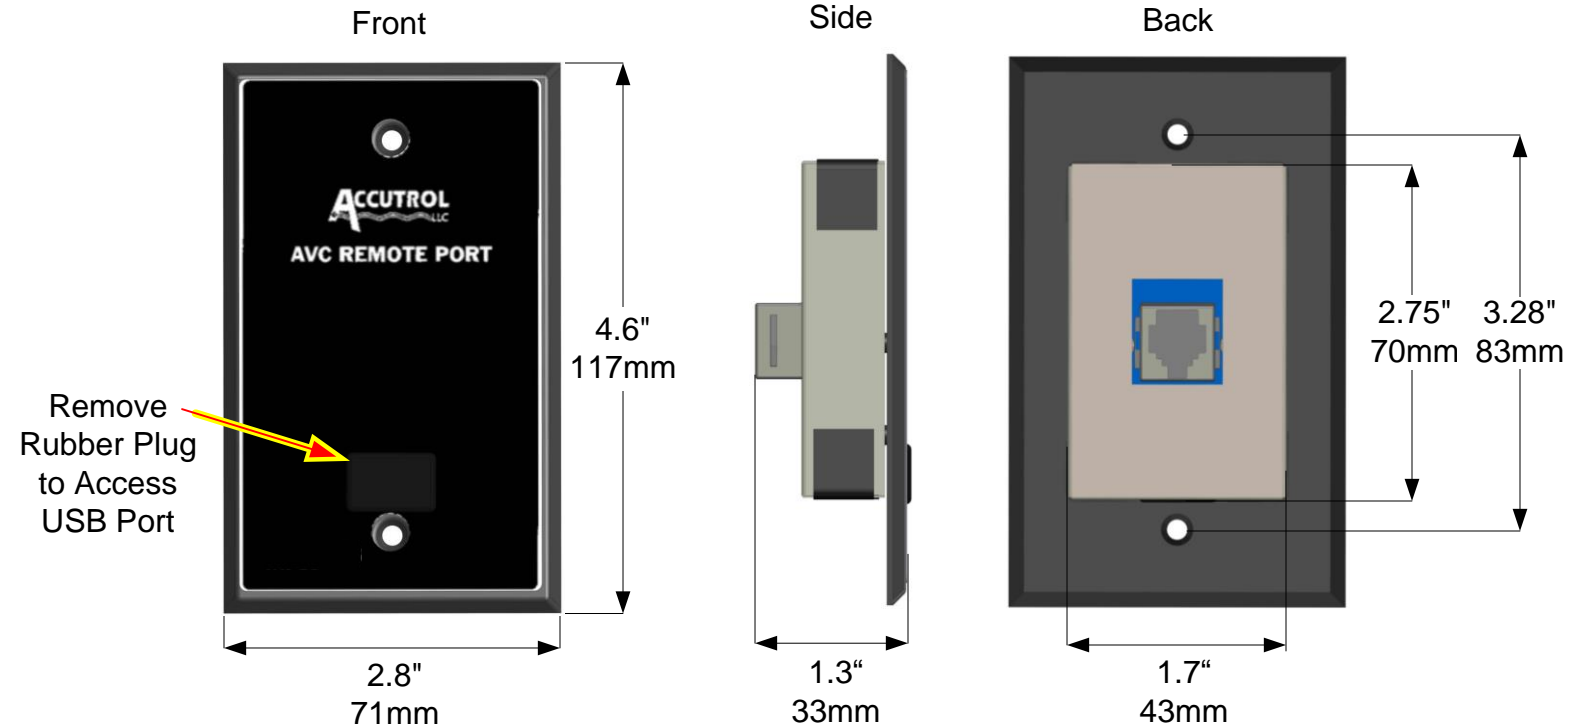

## APPLICATION

