ACCUVALVE® MODEL AVR4000 SUBMITTAL

MODEL CODE

MARNING: NOT FOR USE WITH PERCHLORIC ACID

BLANK = NO OPTIONS

F = FLANGES (REF NOTES 2 & 3)

S = TIGHT SHUT-OFF (REF NOTE 1)

17 = FAIL LAST POSITION (FLP), 11 SEC

I = INSULATION (REF NOTE 4)

W = WIRELESS BLUETOOTH

OPTIONS

ACTUATOR

MATERIALS

Materials Exposed to the Airstream **Model Material Designator** (2) 304SS (3) 316SS (4) Aluminum 304 Stainless Steel 316 Stainless Steel Al. Alloy 5052-H32 **Compression Section** 304 Stainless Steel 316 Stainless Steel Al. Alloy 5052-H32 Static Regain Section 304 Stainless Steel 316 Stainless Steel Al. Alloy 5052-H32 **End Plate** 304 Stainless Steel 316 Stainless Steel Galvanized Steel Blades 304 Stainless Steel 316 Stainless Steel Galvanized Steel Shafts 316 Stainless Steel 316 Stainless Steel 316 Stainless Steel **Shaft Bearings** Teflon Teflon Teflon Polycarbonate Plastic, Polycarbonate Plastic, Polycarbonate Plastic, **Vortex Sensors** UL94-V0 UL94-V0 UL94-VO Sensor Tubing Polyurethane, Ether-based Polyurethane, Ether-based Polyurethane, Ether-based **Compression Seals** Viton Rubber Viton Rubber **EPDM Rubber** Machine Screws 304 Stainless Steel 316 Stainless Steel 304 Stainless Steel Rivets 304SS 316SS 304SS

Viton Rubber

Viton Rubber

VALVE HOUSING MATERIAL

- 2 = 304SS, 20 GAUGE
- 3 = 316SS, 20 GAUGE
- 4 = ALUMINUM, 16 GAUGE

SIZE

- 06 = 06" DIAMETER
- 08 = 08" DIAMETER
- 10 = 10" DIAMETER
- 12 = 12" DIAMETER 14 = 14" DIAMETER
- 18 = 12"x18" RECTANGULAR
- 24 = 12"x24" RECTANGULAR

MODEL CODE NOTES:

- 1) Blade seals are standard on all 6" valves, therefore -S option is not available for valve size -06.
- 2) Reference the Flange Detail Vanstone submittal drawing for round flanges
- 3) Reference the Flange Detail Rectangular submittal drawing for rectangular flanges
- 4) Reference the Insulation detail submittal drawing

OPERATING RANGE

	Min. Flow Measured			Full Scale Range		
Valve Model	CFM	L/S	CMH	CFM	L/S	СМН
AVR4X06-XX	30	14	51	315	149	535
AVR4X08-XX	80	38	136	800	378	1359
AVR4X10-XX	120	57	204	1300	613	2209
AVR4X12-XX	180	85	306	1790	845	3041
AVR4X14-XX	250	118	425	2750	1298	4672
AVR4X18-XX	260	123	442	3200	1510	5437
AVR4X24-XX	350	165	595	4000	1888	6796

Temperature Range							
Material Code	Description	Airstream		Ambient			
iviateriai code	Description	Min. Temp.	Max.Temp.	Min. Temp.	Max.Temp.		
2	304 SS	-20° F (-29° C)	165° F (74° C)	-20° F (-29° C)	125° F (52° C)		
3	316 SS	-20° F (-29° C)	165° F (74° C)	-20° F (-29° C)	125° F (52° C)		
4	Aluminum	-20° F (-29° C)	165° F (74° C)	-20° F (-29° C)	125° F (52° C)		

SIZE AND WEIGHT

	Valve Dimensions (Reference Sheet 2) Weight											
Valve Model	"D" o	r"W"	"L" (N	ote 1)	"H	⊣ "	Stainle	ss Steel	Alum	inum	Flange	e Add
	in.	mm	in.	mm	in.	mm	Lbs.	kg	Lbs.	kg	Lbs.	kg
AVR4X06-XX	5.88	149	22	559	10	254	13	5.9	9	4.1	2.0	0.9
AVR4X08-XX	7.88	200	24	610	12	305	16	7.3	12	5.4	2.6	1.2
AVR4X10-XX	9.88	250	24	610	14	356	20	9.1	14	6.4	3.2	1.5
AVR4X12-XX	11.88	300	27	686	16	406	26	11.8	16	7.3	4.5	2.0
AVR4X14-XX	13.88	350	30	762	18	457	30	13.6	20	9.1	5.2	2.4
AVR4X18-XX	17.88	454	30	762	17	432	43	19.5	26	11.8	5.0	2.3
AVR4X24-XX	23.88	607	30	762	17	432	49	22.2	29	13.2	5.5	2.5

SIZE AND WEIGHT NOTES:

1) Round valves with optional flanges "L" is 1/2" (13mm) less than standard valves

Blade Seals (optional)

21 Commerce Dr Danbury, CT 06810 Tel: 203-445-9991 accutrollic.com

Accutrol Representative:


SUBMITTAL DRAWING

 
AccuValve® Model AVR4000


THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE.
THIS DOCUMENT OR THE CONTENTS
THEREOF SHALL NOT BE MODIFIED
WITHOUT PRIOR WRITTEN
PERMISSION BY ACCUTROLLLC

DWG. NO:	AVR4000 SUBMITTAL DWG					
REVISION:	D	ECN:		3020		
REV. DATE:	10-15-24	SHEET:	1	OF:	5	

EPDM Rubber

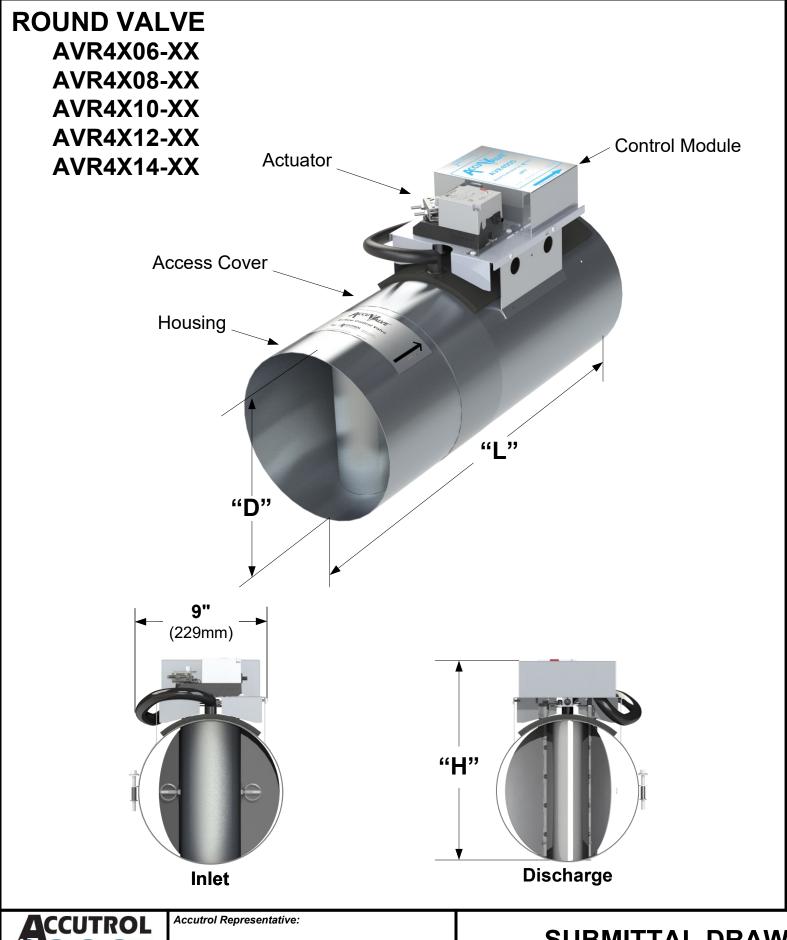



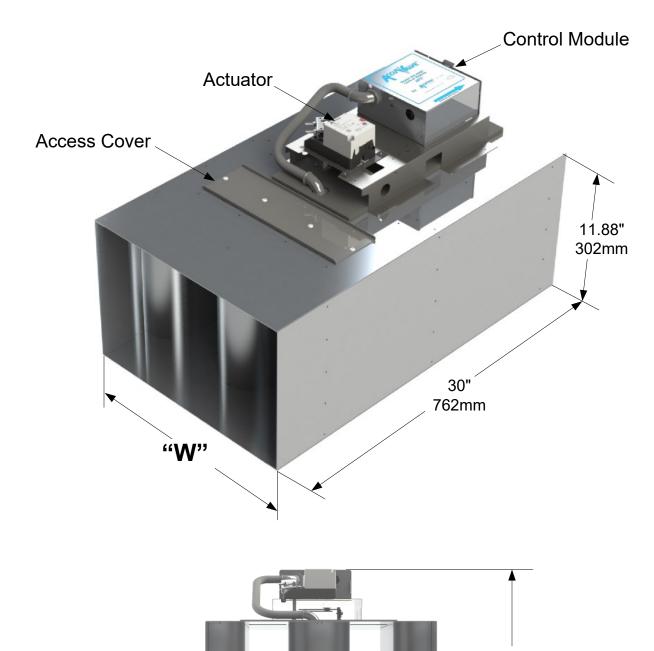

Inlet

21 Commerce Dr Danbury, CT 06810 Tel: 203-445-9991 accutrollic.com

SUBMITTAL DRAWING

AccuValve® Model AVR4000

THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE.

THIS DOCUMENT OR THE CONTENTS THEREOF SHALL NOT BE MODIFIED WITHOUT PRIOR WRITTEN PERMISSION BY ACCUTROL LLC.

DWG. NO:	AVR4000 SUBMITTAL DWG						
REVISION:	D	ECN:		3020			
REV. DATE:	10-15-24	SHEET:	2	OF:	5		

17"

432mm

ROUND VALVE: INSTALLATION INSTRUCTIONS

1. Read all instructions prior to beginning installation.

NOTE: For detailed installation instructions, refer to the AccuValve[®] Installation & Operation Manual.

- 2. Verify the tag number located on the valve label matches the HVAC schedule, when applicable.
- 3. Locate the duct section which the valve is servicing and select a suitable mounting location for the valve.

NOTES: The AccuValve[®] does not require straight inlet duct runs to operate properly, however it's always best to locate the valve away from transitions and bends to minimize impact on system static pressure. Be sure to select a location that will provide a minimum clearance of 14 inches (356 mm) unobstructed access to the control module, actuator and valve access cover. The AccuValve[®] is not position sensitive. It can be installed in any plane or rotational axis without having impact on the performance.

4. Provide an opening in the selected duct section sized appropriately for the valve being installed.


NOTE: A slip-fit valve will require an opening approximately 2" (50.8 mm) smaller than the valve length, whereas a flanged valve will require an opening the same length as the valve. Reference Sheet 1 and 2 for valve dimensions.

- 5. Install duct hangers within 12 inches (305 mm) from each end of the valve. Reference Sheet 1 for valve weights.
- WARNING: Use duct hangers and hardware designed to support the total load of valve and associated duct sections. Failure to do so may result in serious personal injury or death.
- 6. Install the valve into the duct in accordance with the airflow direction label located on the valve. Position the valve for easy access to the control module side then secure to duct per the appropriate figure below.

NOTE: Screws, nuts, fasteners, duct sealant, hangers, and gaskets are <u>not</u> provided by Accutrol LLC.


Standard Slip-fit Valve Secured Using Tek Screws

Seal joints using duct sealant and secure valve to duct at both ends using Tek screws.

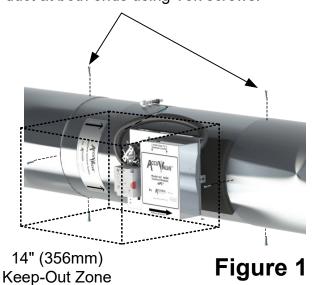

Standard Slip-fit Valve Secured Using Draw Bands


(Draw Bands are Sold Separately)
After sealing joints with appropriate type of tape, secure both ends using draw band clamps.

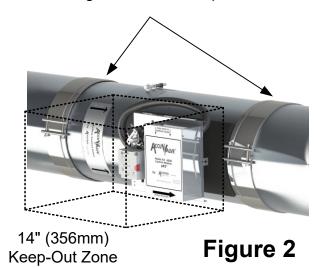

Flanged Valve "Option F" Secured Using Companion Flanges

(Companion Flanges are Sold Separately)

Install companion flanges to duct ends and secure to duct. Apply duct sealant and/or gasket to flange face. Install valve and rotate VanStone flanges to align with bolt holes on the duct flanges. Secure flanges using appropriate hardware.

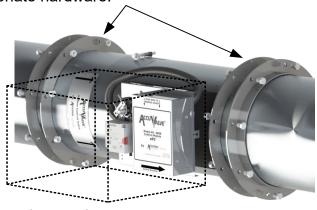

14" (356mm) Keep-Out Zone

Figure 3

WARNING: Wear eye protection, protective gloves and clothing suitable for working with sheet metal which may have sharp edges.

Reference Accutrol Draw Band Clamp Submittal Drawing for Details

Reference Accutrol VanStone Flange Submittal Drawing for Details



Accutrol Representative:

SUBMITTAL DRAWING

AccuValve® Model AVR4000

THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE.	
THIS DOCUMENT OR THE CONTENTS THEREOF SHALL NOT BE MODIFIED	
WITHOUT PRIOR WRITTEN PERMISSION BY ACCUTROL LLC.	

DWG. NO:	AVR4000 SUBMITTAL DWG				
REVISION:	D	ECN:		3020	
REV. DATE:	10-15-24	SHEET:	3	OF:	5

RECTANGULAR VALVE: INSTALLATION INSTRUCTIONS

- 1. Read all instructions completely before installing the valve.
 - **WARNING:** Wear eye protection, protective gloves and clothing suitable for working with sheet metal which may have sharp edges.
- 2. Verify the tag number located on the valve label matches the HVAC schedule when applicable.
- 3. Select optimum mounting location for the valve.
 - **NOTE**: The AccuValve[®] does not require straight inlet duct runs to operate properly, however it's always best to locate any duct device away from transitions and bends to minimize impact on system static pressure.
- 4. Allow a minimum clearance of 14 inches (356 mm) unobstructed access to the controller, actuator and valve access cover.


NOTE: Rectangular valves are normally installed with the "access side" facing downwards for easy access. However, the AccuValve[®] is not position sensitive. It can be installed in any plane or rotational axis without having impact on the performance.

- 5. To support the weight of the valve, install duct hangers within 12 inches (305 mm) of valve connections. Reference Sheet 1 for valve weights.
 - ! WARNING: Use duct hangers and hardware designed to support the total load of the valve and associated duct sections. Failure to do so may result in serious personal injury or death.
- 6. After the duct section is properly supported to carry the weight of the valve, install valve into the duct in accordance with the Airflow Direction Label located on the valve. Position valve so the controller, actuator and access cover are easily accessible.
- 7. Reference the appropriate diagram to the right for installation details. **NOTE:** Screws, nuts, fasteners, duct sealant, hangers, companion flanges and gaskets are not provided by Accutrol LLC.

RECTANGULAR VALVE: INSTALLATION DIAGRAMS

Figure 1


Standard Slip-fit Valve Using Tek Screws

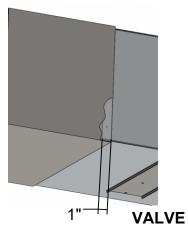


For slip-fit applications valve must be inserted at least 1" into ductwork to cover open holes on valve housing.

Figure 2
Flanged Valve
"Option F" Using
Companion Flanges
(Provided by Others)

Reference Rectangular AccuValve Flange Detail Submittal DWG

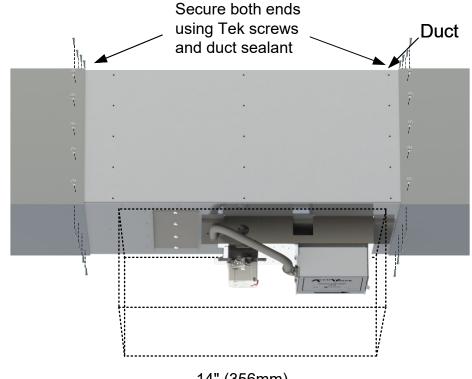

14" (356mm) Keep-Out Zone

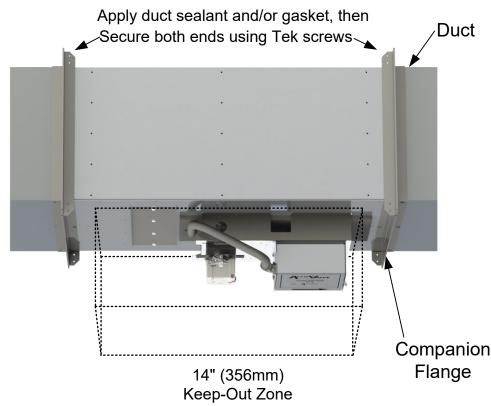

21 Commerce Dr Danbury, CT 06810 Tel: 203-445-9991 accutrollic.com

Accutrol Representative:

SUBMITTAL DRAWING

AccuValve® Model AVR4000

THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE.


THIS DOCUMENT OR THE CONTENTS THEREOF SHALL NOT BE MODIFIED WITHOUT PRIOR WRITTEN PERMISSION BY ACCUTROL LLC.

	p							
DWG. NO:	AVR4000 SUE	AVR4000 SUBMITTAL DWG						
REVISION:	D	ECN:	3020)				
REV. DATE:	10-15-24	SHEET:	4 OF					

CONTROL MODULE

Note: Do not use controller enclosure as junction box for other equipment

Note: If a conduit connection is required, the strain relief fitting and bushing can be removed and replaced with a .875" (22mm) conduit fitting. (Provided by Others)

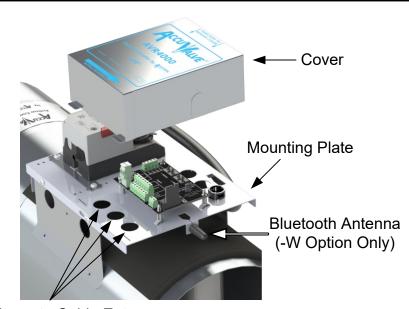

Alternate Cable Entry

Wiring Instructions

- **1.** Remove cover and route cables through strain-relief fitting on mounting plate.
- 2. Connect wires to the appropriate terminals and secure terminal screws.
- 3. Insert the ratcheting strain relief over cable(s) and push down until snug.
- 4. Reinstall cover.

ELECTRICAL SPECIFICATIONS

POWER: 24VAC +/-20%, 50/60Hz, Class 2 Power Source, 18VA or 24VDC +/-10% 10W

INPUTS: Al-1: Supply Air Discharge Temperature Signal

Signal Type: Resistance: 10K-ohm Type II or III NTC Thermistor

Al-2: Return Exhaust Airflow Volume Signal

Signal Type: Voltage: 0-10v Range, Input Impedance = 100K ohms

Al-3: Other Exhaust Airflow Volume Signal

Signal Type: Voltage: 0-10v Range, Input Impedance = 100K ohms DI-1 & DI-2: Dedicated Digital Inputs Used as Setpoint Mode Selectors

Signal Type: Dry Contact Only

OUTPUTS: AO-1: Reheat Valve Control Signal

Signal Type: Voltage; 0-10V, 2-10V, 0-5V or 1-5V, Current; 0-20mA, 4-20mA

AO-2: General Exhaust Control Signal

Signal Type: Voltage; 0-10V, 2-10V, 0-5V or 1-5V, Current; 0-20mA, 4-20mA

NETWORK: BACnet MS/TP

EIA 485 2-wire, Receiver Impedance: 1/4 unit load

Network Bias & Termination are NOT provided internally by the AVR4000

CONFIG.: USB Type C Port, Wireless Bluetooth (Optional)

Connect to Computer running AccuValve Insight Software

DEVICE: RJ-45 Port, Connect to Accutrol Device using Factory-Supplied Cable Only


TERMNALS: Power & BACnet: 2-Position Removable Vertical Plugs, Wire Size Range 12-30 AWG

Inputs/Outputs: Dual 7-Position Terminal Block, Wire Size Range 12-30 AWG

Note: Consult local electrical building codes to determine wire size required for application.

WIRING DIAGRAM

NOTE: Connections will vary based on application. For detailed wiring instructions, use this drawing in conjunction with the job-specific wiring diagrams.

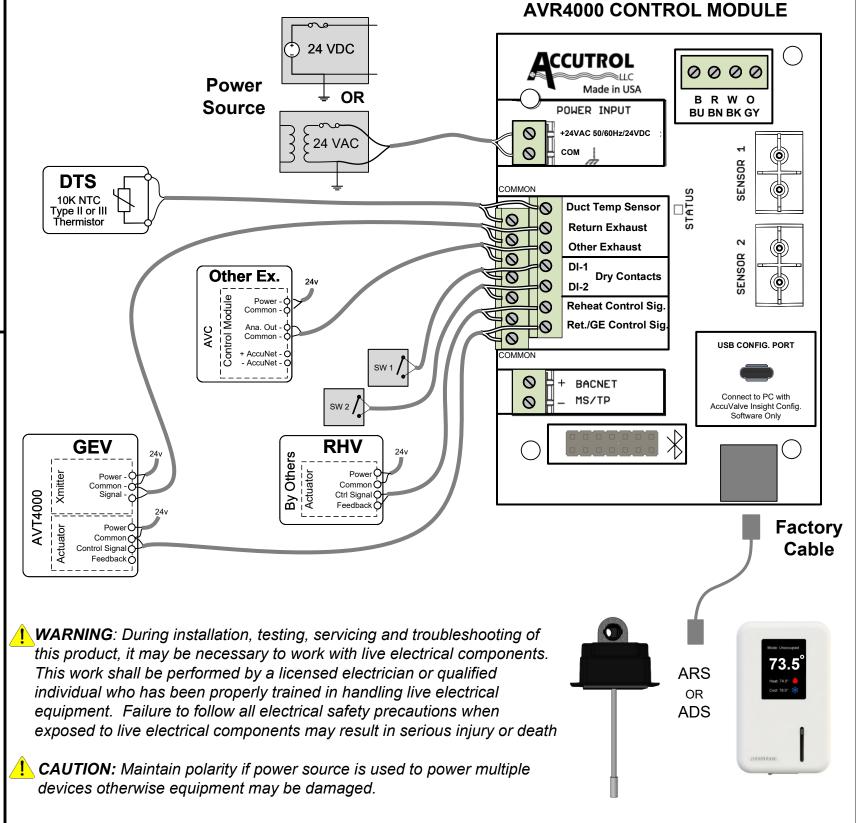



Accutrol Representative:

SUBMITTAL DRAWING

AccuValve® Model AVR4000

THIS DOCUMENT IS SUBJECT	
TO CHANGE WITHOUT NOTICE.	
THIS DOCUMENT OR THE CONTENTS	
THEREOF SHALL NOT BE MODIFIED	
WITHOUT PRIOR WRITTEN	Ī
PERMISSION BY ACCUTROLLLC	

DWG. NO:	AVR4000 SUBMITTAL DWG						
REVISION:	D	ECN:		3020			
REV. DATE:	10-15-24	SHEET:	5	OF:	5		