# **ACCUVALVE® MODEL AVC4000 SUBMITTAL**

## **MODEL CODE**

**! WARNING:** NOT FOR USE WITH PERCHLORIC ACID

### **MATERIALS**

#### AVC4 **VALVE MATERIAL OPTIONS** (Housing / End Plate & Blades) **BLANK = NO OPTIONS** 2 = 304SS / 304SSF = FLANGES (REF NOTES 2 & 3) 3 = 316SS / 316SSI = INSULATION (REF NOTE 4) 4 = ALUMINUM / GALVANIZED STEEL S = TIGHT SHUT-OFF (REF NOTE 1) 7 = ALUMINUM / 304SS W = WIRELESS BLUETOOTH SIZE 06 = 06" DIAMETER **ACTUATOR**

# 17 = FAIL LAST POSITION (FLP), 10 SEC

#### Materials Exposed to the Airstream **Valve Material** (2) 304SS (3) 316SS (7) Aluminum & 304SS (4) Aluminum Code 304LSS (20 GA.) 316LSS (20 GA.) Alum 5052-H32 (18 GA.) Alum 5052-H32 (18 GA.) Housing Alum 5052-H32 (16 GA.) 304LSS (20 GA.) 316LSS (20 GA.) Alum 5052-H32 (16 GA.) Compression Section 304LSS (20 GA.) 316LSS (20 GA.) Alum 5052-H32 (18 GA.) Alum 5052-H32 (18 GA.) Static Regain Section **End Plate** 304LSS (16 GA.) 316LSS (16 GA.) Galv. Steel (16 GA.) 304LSS (16 GA.) Blades 304LSS (16 GA.) 316LSS (16 GA.) Galv. Steel (16 GA.) 304LSS (16 GA.) Shafts 316LSS 316LSS 316LSS 316LSS **Shaft Bearings** Teflon Teflon Teflon Teflon Polycarbonate Polycarbonate Plastic, Polycarbonate Plastic, Polycarbonate Plastic, **Vortex Sensors** Plastic, UL94-V0 UL94-V0 UL94-VO UL94-VO Polyurethane Polyurethane Polyurethane Polyurethane Sensor Tubing (Ether-based) (Ether-based) (Ether-based) (Ether-based) Compression Seals Viton Rubber Viton Rubber **EPDM Rubber EPDM Rubber** Machine Screws 304 SS 316 SS 304 SS 304 SS 304 SS 316 SS 304 SS 304 SS **EPDM Rubber** Blade Seals (optional) Viton Rubber Viton Rubber **EPDM Rubber**

#### **MODEL CODE NOTES:**

08 = 08" DIAMETER

10 = 10" DIAMETER

12 = 12" DIAMETER

14 = 14" DIAMETER

18 = 12"x18" RECTANGULAR

24 = 12"x24" RECTANGULAR

- 1) Blade seals are standard on all 6" valves, therefore -S option is not available for valve size -06.
- 2) Reference the Flange Detail Vanstone submittal drawing for round flanges
- 3) Reference the Flange Detail Rectangular submittal drawing for rectangular flanges
- 4) Reference the Insulation detail submittal drawing

# **OPERATING RANGE**

	Min. Flow Measured			Full Scale Range		
Valve Model	CFM	L/S	СМН	CFM	L/S	СМН
AVC4X06-XX	30	14	51	315	149	535
AVC4X08-XX	80	38	136	800	378	1359
AVC4X10-XX	120	57	204	1300	613	2209
AVC4X12-XX	180	85	306	1790	845	3041
AVC4X14-XX	250	118	425	2750	1298	4672
AVC4X18-XX	260	123	442	3200	1510	5437
AVC4X24-XX	350	165	595	4000	1888	6796

Temperature Range							
Valve Material	Airst	ream	Ambient				
Code	Min. Temp.	Max.Temp.	Min. Temp.	Max.Temp.			
2, 3, 4, 7	-20° F (-29° C)	165° F (74° C)	-20° F (-29° C)	125° F (52° C)			

# **SIZE AND WEIGHT**

Valve Dimensions (Reference Sheet 2)				Weight								
Valve Model	"D" o	r "W"	"L" (N	lote 1)	"H	<b>-</b> 1"	Stainle	ss Steel	Alum	inum	Flang	e Add
	in.	mm	in.	mm	in.	mm	Lbs.	kg	Lbs.	kg	Lbs.	kg
AVC4X06-XX	5.88	149	22	559	10	254	13	5.9	9	4.1	2.0	0.9
AVC4X08-XX	7.88	200	24	610	12	305	16	7.3	12	5.4	2.6	1.2
AVC4X10-XX	9.88	250	24	610	14	356	20	9.1	14	6.4	3.2	1.5
AVC4X12-XX	11.88	300	27	686	16	406	26	11.8	16	7.3	4.5	2.0
AVC4X14-XX	13.88	350	30	762	18	457	30	13.6	20	9.1	5.2	2.4
AVC4X18-XX	17.88	454	30	762	17	432	43	19.5	26	11.8	5.0	2.3
AVC4X24-XX	23.88	607	30	762	17	432	49	22.2	29	13.2	5.5	2.5

#### **SIZE AND WEIGHT NOTES:**

1) Round valves with optional flanges "L" is 1/2" (13mm) less than standard valves

CCUTROL 21 Commerce Dr Danbury, CT 06810 Tel: 203-445-9991 accutrollic.com


Accutrol Representative:

# SUBMITTAL DRAWING


AccuValve® Model AVC4000


THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE.
THIS DOCUMENT OR THE CONTENTS
THEREOF SHALL NOT BE MODIFIED
WITHOUT PRIOR WRITTEN
PERMISSION BY ACCUTROL LLC.

DWG. NO:	AVC4000 SUBMITTAL DWG					
REVISION:	E	ECN:		3038		
REV. DATE:	2-13-25	SHEET:	1	OF:	5	

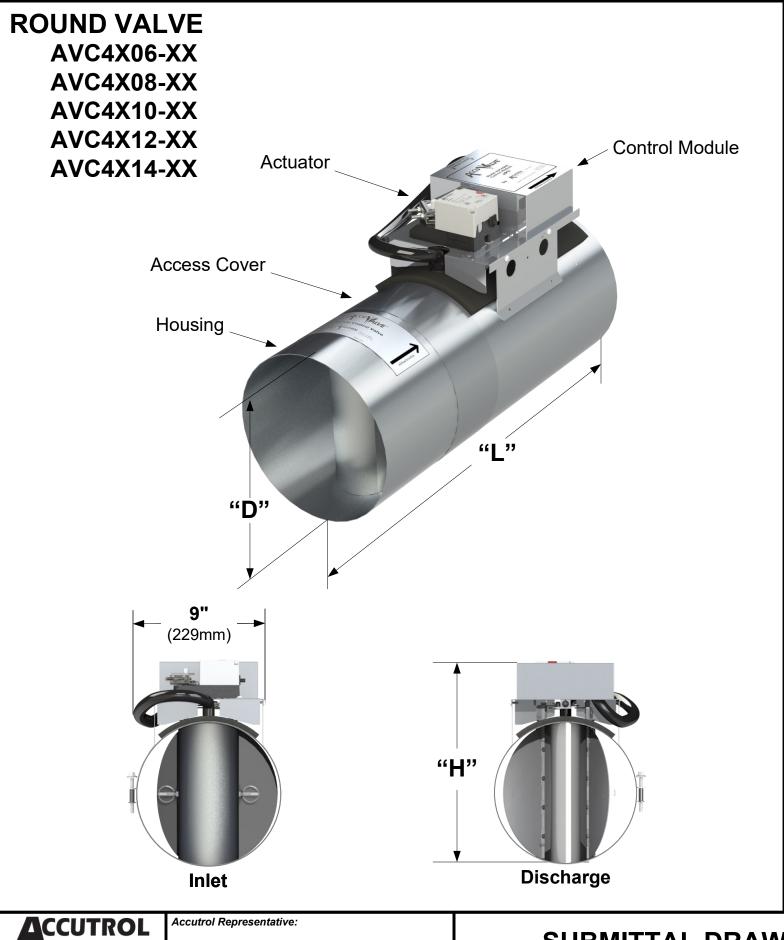

# RECTANGULAR VALVE AVC4X18-XX AVC4X24-XX

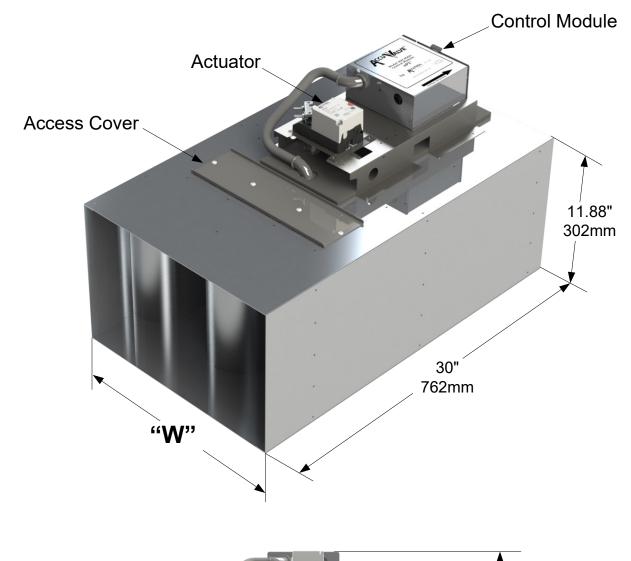

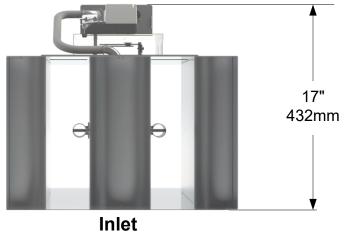

21 Commerce Dr Danbury, CT 06810 Tel: 203-445-9991 accutrollic.com

**SUBMITTAL DRAWING** 

AccuValve® Model AVC4000

THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE. THIS DOCUMENT OR THE CONTENTS THEREOF SHALL NOT BE MODIFIED WITHOUT PRIOR WRITTEN PERMISSION BY ACCUTROL LLC.

DWG. NO:	AVC4000 SUBMITTAL DWG						
REVISION:	E	ECN:	3038				
REV. DATE:	2-13-25	SHEET:	2	OF:	5		

#### **ROUND VALVE: INSTALLATION INSTRUCTIONS**

1. Read all instructions prior to beginning installation.

**NOTE:** For detailed installation instructions, refer to the AccuValve<sup>®</sup> Installation & Operation Manual.

- 2. Verify the tag number located on the valve label matches the HVAC schedule, when applicable.
- 3. Locate the duct section which the valve is servicing and select a suitable mounting location for the valve.

NOTES: The AccuValve® does not require straight inlet duct runs to operate properly, however it's always best to locate the valve away from transitions and bends to minimize impact on system static pressure. Be sure to select a location that will provide a minimum clearance of 14 inches (356 mm) unobstructed access to the control module, actuator and valve access cover. The AccuValve® is not position sensitive. It can be installed in any plane or rotational axis without having impact on the performance.

4. Provide an opening in the selected duct section sized appropriately for the valve being installed.


**NOTE:** A slip-fit valve will require an opening approximately 2" (50.8 mm) smaller than the valve length, whereas a flanged valve will require an opening the same length as the valve. Reference Sheet 1 and 2 for valve dimensions.

- 5. Install duct hangers within 12 inches (305 mm) from each end of the valve. Reference Sheet 1 for valve weights.
- MARNING: Use duct hangers and hardware designed to support the total load of valve and associated duct sections. Failure to do so may result in serious personal injury or death.
- 6. Install the valve into the duct in accordance with the airflow direction label located on the valve. Position the valve for easy access to the control module side then secure to duct per the appropriate figure below.

**NOTE:** Screws, nuts, fasteners, duct sealant, hangers, and gaskets are not provided by Accutrol LLC.

### Standard Slip-fit Valve Secured Using Tek Screws


Seal joints using duct sealant and secure valve to duct at both ends using Tek screws.

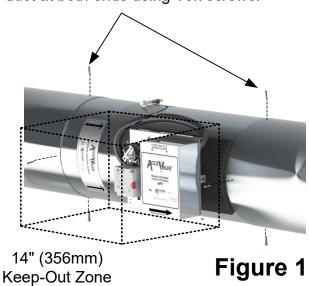

Accutrol Representative:

### **Standard Slip-fit Valve Secured Using Draw Bands**

(Draw Bands are Sold Separately) After sealing joints with appropriate type of tape, secure both ends using draw band clamps.

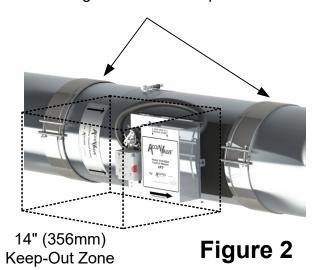


Reference Accutrol Draw Band Clamp Submittal Drawing for Details

### Flanged Valve "Option F" Secured Using Companion Flanges

(Companion Flanges are Sold Separately)

Install companion flanges to duct ends and secure to duct. Apply duct sealant and/or gasket to flange face. Install valve and rotate VanStone flanges to align with bolt holes on the duct flanges. Secure flanges using appropriate hardware.

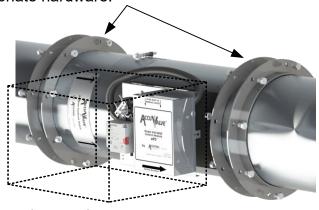

14" (356mm) Keep-Out Zone

Figure 3

**WARNING:** Wear eye protection, protective gloves and clothing suitable for working with sheet metal which may have sharp edges.

Reference Accutrol VanStone Flange Submittal Drawing for Details



SUBMITTAL DRAWING

AccuValve® Model AVC4000

THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE.	
THIS DOCUMENT OR THE CONTENTS THEREOF SHALL NOT BE MODIFIED	
WITHOUT PRIOR WRITTEN PERMISSION BY ACCUTROL LLC.	

DWG. NO:	AVC4000 SUBMITTAL DWG				
REVISION:	E	ECN:		3038	
REV. DATE:	2-13-25	SHEET:	3	OF:	5

### **RECTANGULAR VALVE: INSTALLATION INSTRUCTIONS**

- 1. Read all instructions completely before installing the valve.
  - **WARNING:** Wear eye protection, protective gloves and clothing suitable for working with sheet metal which may have sharp edges.
- 2. Verify the tag number located on the valve label matches the HVAC schedule when applicable.
- 3. Select optimum mounting location for the valve.

**NOTE**: The AccuValve<sup>®</sup> does not require straight inlet duct runs to operate properly, however it's always best to locate any duct device away from transitions and bends to minimize impact on system static pressure.

4. Allow a minimum clearance of 14 inches (356 mm) unobstructed access to the controller, actuator and valve access cover.


**NOTE:** Rectangular valves are normally installed with the "access side" facing downwards for easy access. However, the AccuValve<sup>®</sup> is not position sensitive. It can be installed in any plane or rotational axis without having impact on the performance.

- 5. To support the weight of the valve, install duct hangers within 12 inches (305 mm) of valve connections. Reference Sheet 1 for valve weights.
  - ! WARNING: Use duct hangers and hardware designed to support the total load of the valve and associated duct sections. Failure to do so may result in serious personal injury or death.
- 6. After the duct section is properly supported to carry the weight of the valve, install valve into the duct in accordance with the Airflow Direction Label located on the valve. Position valve so the controller, actuator and access cover are easily accessible.
- 7. Reference the appropriate diagram to the right for installation details. **NOTE:** Screws, nuts, fasteners, duct sealant, hangers, companion flanges and gaskets are not provided by Accutrol LLC.

### **RECTANGULAR VALVE: INSTALLATION DIAGRAMS**

# Figure 1


Standard Slip-fit Valve Using Tek Screws

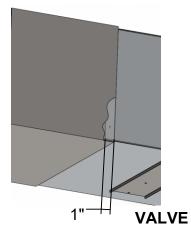


For slip-fit applications valve must be inserted at least 1" into ductwork to cover open holes on valve housing.

Figure 2
Flanged Valve
"Option F" Using
Companion Flanges
(Provided by Others)

Reference Rectangular AccuValve Flange Detail Submittal DWG

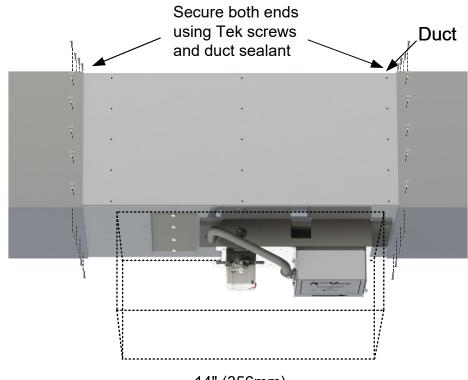

14" (356mm) Keep-Out Zone

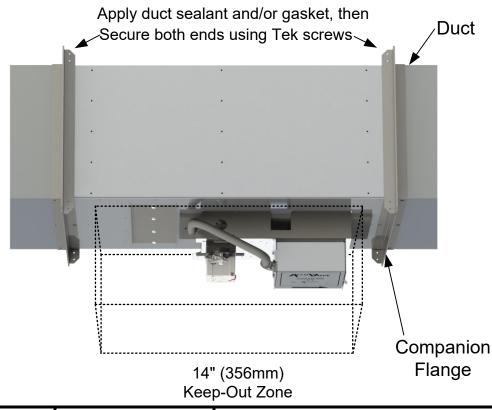

21 Commerce Dr Danbury, CT 06810 Tel: 203-445-9991 accutrollic.com

Accutrol Representative:

### **SUBMITTAL DRAWING**

AccuValve® Model AVC4000


THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE.
THIS DOCUMENT OR THE CONTENTS THEREOF SHALL NOT BE MODIFIED WITHOUT PRIOR WRITTEN PERMISSION BY ACCUTROL LLC.

	'					
DWG. NO:	AVC4000 SUBMITTAL DWG					
REVISION:	Е	ECN:		3038		
REV. DATE:	2-13-25	SHEET:	4	OF	5	

**CONTROL MODULE** 

**Note:** Do not use controller enclosure as junction box for other equipment

Note: If a conduit connection is required, the strain relief fitting and bushing can be removed and replaced with a .875" (22mm) conduit fitting. (Provided by Others)

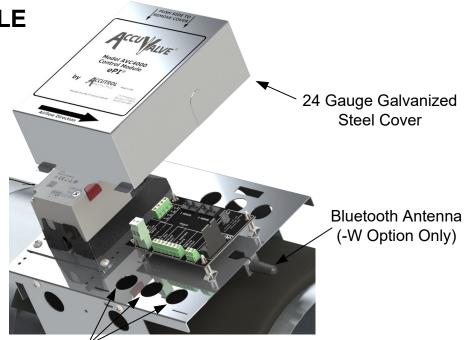

#### Wiring Instructions

- 1. Remove cover.
- **2.** Route cables through the strain-relief fitting into the enclosure.

Alternate Cable Entry

- 3. Connect wires to the appropriate terminals.
- 4. Secure terminal screws.
- 5. Insert the ratcheting strain relief over cable(s) and push down until snug.
- **6.** Reinstall cover.

### **ELECTRICAL SPECIFICATIONS**

#### **POWER:**

24VAC +/-20%, 50/60Hz. (Class 2 Power Source) 17VA 24VDC +/-10%, 9W

#### INPUT:

#### **Analog Input (Software Selectable):**

Voltage: 0-10v Range, Input Impedance = 100K ohms Current: 0-20mA Range, Input Impedance = 500 ohms Resistance: 0-20K Range, 500uA Internal Current Source

**Digital Inputs:** 2 dry-contact inputs

#### **OUTPUT:**

Analog Output (Software Selectable): 0-20mA, 4-20mA, 0-10V, 2-10V, 0-5V or 1-5V V-out capable of driving 1 K-ohm load @ 10V, I-out capable of driving 1K-ohm load

RS-485: EIA 485 BACnet MS/TP 2-wire, Receiver Impedance: 1/4 unit load

Note: Network bias and field termination are NOT provided by the AVC Control Module

**CONFIGURATION PORT:** USB Type C, Wireless Bluetooth (Optional)

**TERMINAL PLUGS:** 

Danbury, CT 06810


Tel: 203-445-9991 accutrollic.com

**Power:** 2-Position, vertical pluggable, Wire size range: 12-30 AWG IO: 7 & 2 Position terminal blocks, Wire size range: 12-30 AWG

Note: Consult local electrical building codes to determine wire size required for application.

### WIRING DIAGRAM

Note: Connections will vary based on application. For detailed wiring instructions, use this drawing in conjunction with the job-specific wiring diagrams.

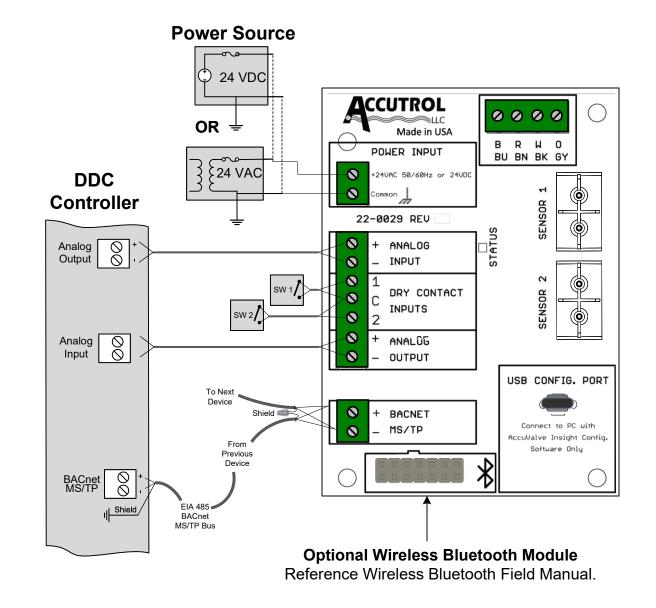

**WARNING**: During installation, testing, servicing and troubleshooting of this product, it may be necessary to work with live electrical components. This work shall be performed by a licensed electrician or qualified individual who has been to live electrical components may result in serious injury or death.

**CAUTION:** Maintain polarity if power source is used to power multiple devices otherwise equipment may be damaged.

properly trained in handling live electrical equipment. Failure to follow all electrical safety precautions when exposed

#### Accutrol Representative:

## SUBMITTAL DRAWING

AccuValve® Model AVC4000

THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE.	DWG. N
THIS DOCUMENT OR THE CONTENTS THEREOF SHALL NOT BE MODIFIED	REVISIO
WITHOUT PRIOR WRITTEN PERMISSION BY ACCUTROL LLC.	REV. DAT

DWG. NO:	AVC4000 SUBMITTAL DWG					
REVISION:	E	ECN:		3038		
REV. DATE:	2-13-25	SHEET:	5	OF:	5	